

R **EAD**
AND
SAVE
THESE
INSTRUCTIONS



AF-340 / AF-350



IMPORTANT SAFEGUARDS


Please read all these instructions carefully before using this product.

1. Read all instructions before operating.
2. Disconnect the power plug before dismantling, assembling, or cleaning.
3. Avoid touching mobile parts of the unit.
4. Make sure the unit is on a dry and even surface.
5. Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, especially while running.
6. Do not use the appliance for any other purpose than its intended use.
7. The fan must not be used if the guards are not fastened according to instructions.
8. When the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
9. Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrician or electrical supplier.
10. The appliance is not intended for use by young children or elderly unless they have been adequately supervised by a responsible person to ensure safety that they can use the appliance safely.
11. Young children or elderly persons should be supervised, and children should not play with the unit.
12. All interventions to the unit made by a non-qualified person will cause the warranty on the unit to be no longer valid.
13. Do not place the machine on soft or uneven ground in order to prevent it from leaking or making noise.
14. Do not place the appliance on its side, back, or front while storing or transporting. If you have received the unit after it has been transported, leave it standing in an upright position for at least two hours before turning on.


IMPORTANT PRODUCT INFORMATION

Congratulations on your purchase of this versatile product which combines a room cleaner, humidifier, and air cleaner. Please read these instructions carefully to get the best cooling effect from your product.


For the best performance of your Evaporative Cooler it should be filled with water, and ice if available, and positioned in a location that will create a 'flow through' air effect. The greatest cooling effect will be felt if the unit is operated in a partly opened doorway or window with the cooled air directed into the room. It is also important to have a door or window partly opened away from the air cooler, in order to create the 'flow through' effect. If this arrangement cannot be met, the Air Cooling System will be less efficient.

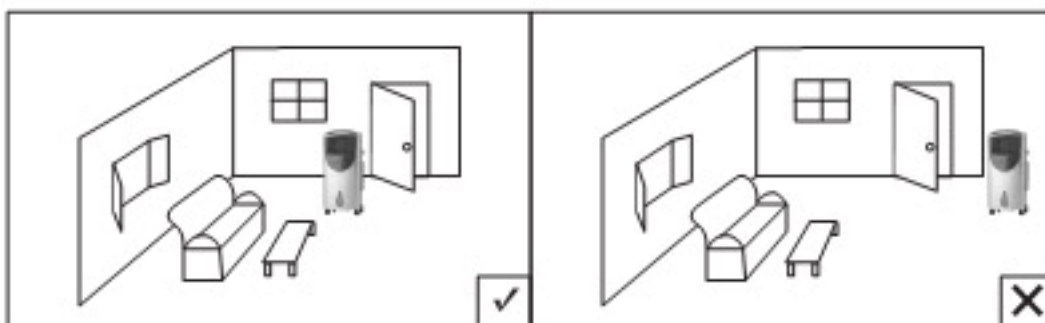

PARTS DESCRIPTIONS

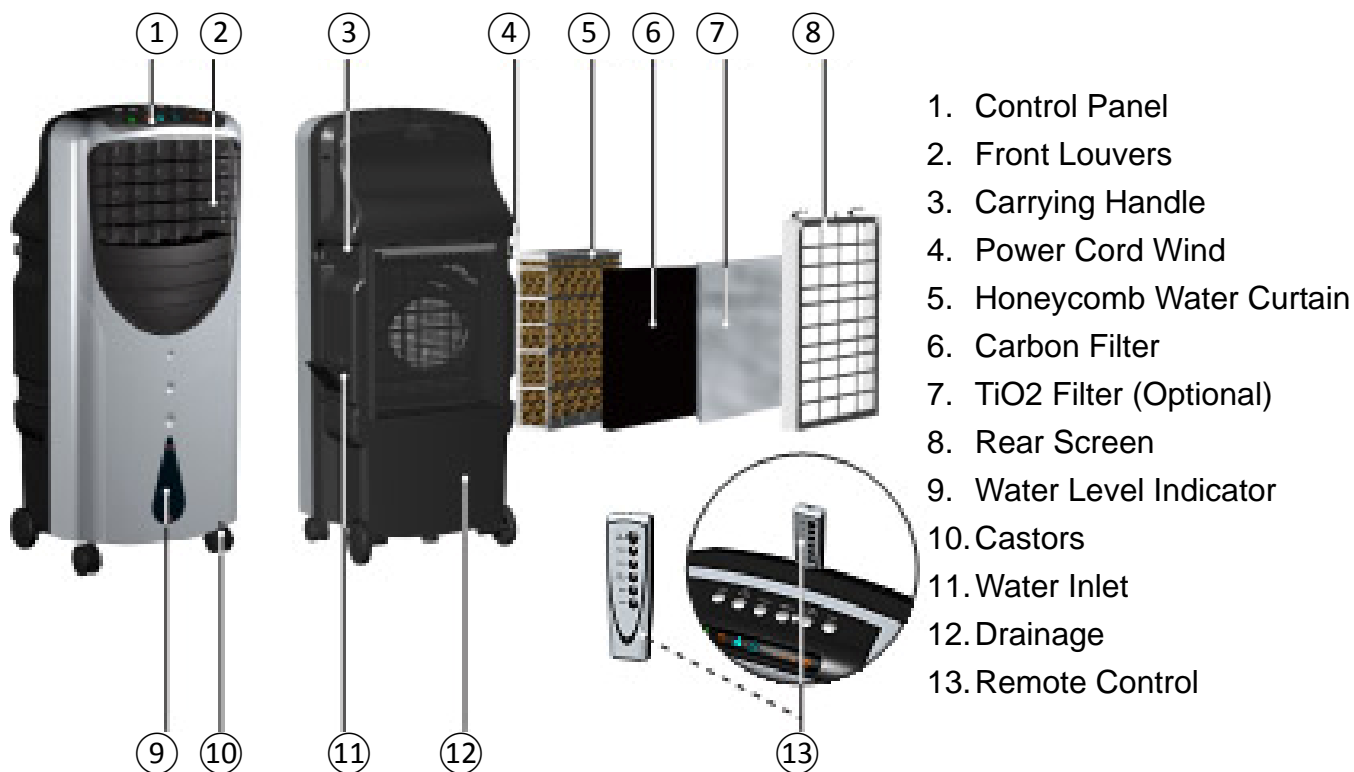

HOW TO USE

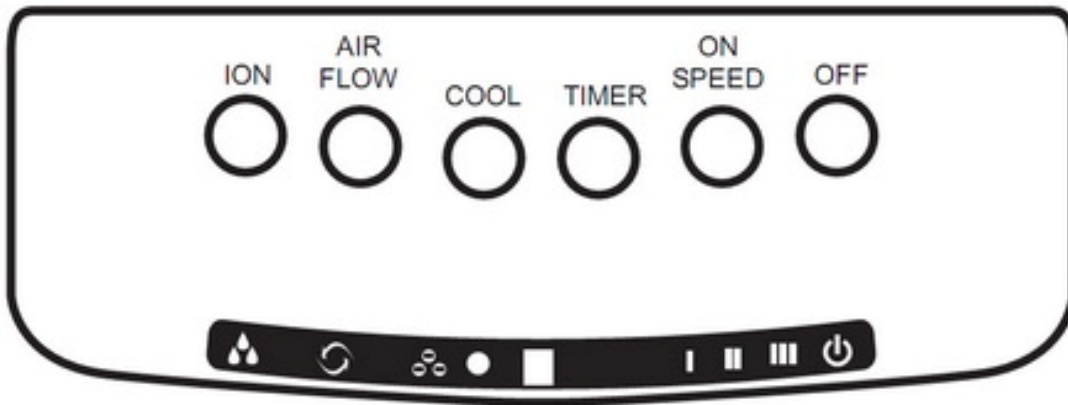

ON / SPEED ADJUSTMENT: To turn the unit on, press the “ON/SPEED” button. The unit will automatically start in the low speed position. Each time the button is pressed, the speed increases from low to medium, and then to high. The control panel will show the power indicator illuminates as speed is increased.



TIMER: Press the timer button to set the time on the fan. The running time can be set from 1 hour to 8 hours. Each time the button is pressed, the time increases. To switch this function off, keep pressing the button until 0 time is displayed.

COOL: This unit is designed for spot cooling. To start the evaporative function of the unit, press the COOL button and the water droplets icon will become illuminated.



AIRFLOW (SWING): This button gives you the choice of having either a fixed or continuously sweeping airflow. For a continuously sweeping airflow, switch the oscillation control to the on position. If you require the airflow to be delivered in a fixed direction, switch the swing control off.



ION: This button starts the ionizer function. An ionizer introduces negative ions into the air that work to purify the air in the room. When this function is on, the icon shown on the right will be illuminated. Press the ion button again to turn this function off.



REMOTE CONTROL: This unit comes with a full function remote control. The remote requires batteries. The effective range is approximately 6m.

PREPARATION AND OPERATION

To obtain the optimum performance from your Air Cooler, we recommend the following procedures be followed:

1. With first use, add a teaspoon of dishwashing liquid or fabric softener to the water. This will ensure that the curtain absorbs the water for the maximum cooling effect. You may find it necessary to repeat this step from time to time, when or if the curtain is not adequately wet.
2. Remove the unit from its packaging.
3. To begin using the cooling function, open the water inlet located on the side of the unit. Fill the WATER ONLY compartment with cold, clean water. Do not overfill and check the water level at the front.
4. For extra cooling power, put ice into the machine through the water inlet.
5. Remember to always use clean water (not tap water) and not allow the same water to stay in the machine for extended periods of time. It is recommended that any water left in the machine for three or more days should be drain through the provided drain plug.
6. Make sure the drain plug is secure and tight before filling. After draining water, make sure the drain plug is refitted correctly and tightly again.

CARE AND MAINTENANCE

Never allow the air filter to be blocked in any way, as this will impair the efficiency of the machine. Pushing the unit up against a wall, or operating the unit near to long curtains or drapes will also impair the airflow and efficiency of the unit.

REAR AIR FILTER

Disconnect the machine from the power supply and remove the rear screen. Remove the top filter fixer and then take out the honeycomb filter. Use a vacuum cleaner to remove loose dust and dirt and replace. Be sure to refit the honeycomb filter and rear screen securely. NEVER OPERATE THE UNIT WITHOUT THE FILTER IN THE CORRECT POSITION.

WATER TANK

If the unit is not being used on a regular basis, it is not necessary to clean the water tank regularly. However in areas containing hard water, deposits will build up, so it is recommended to clean with mild soapy water once every six months.

1. Disconnect the appliance from the main power supply.
2. Completely remove the rear screen and honeycomb filter.
3. Remove any reachable deposits or dirt from within the tank with a cloth and mild soapy detergent.
4. Flush with clean water and then drain through the drain plug.
5. Repeat this procedure if necessary and replace all parts, making sure the filters and rear screen are properly in place.

OUTSIDE CABINET

Use warm mild soapy water and cloth. Do not use abrasive products. Be careful to ensure the control panel does not come into contact with water or any other liquids.

SPECIFICATIONS

Model No.	AF-340	AF-350
Voltage	120V / 60Hz	120V / 60Hz
Watts	Cooling 140W	Cooling 200W
Water Tank Capacity	20 L	20 L
Net Weight	22 lb	22 lb
Selection Speed	3	3
Electronic / Manual Control	Electronic	Electronic