 




**Reflective Carbon Heater
with Remote Control & Ionizer**

AH-350E

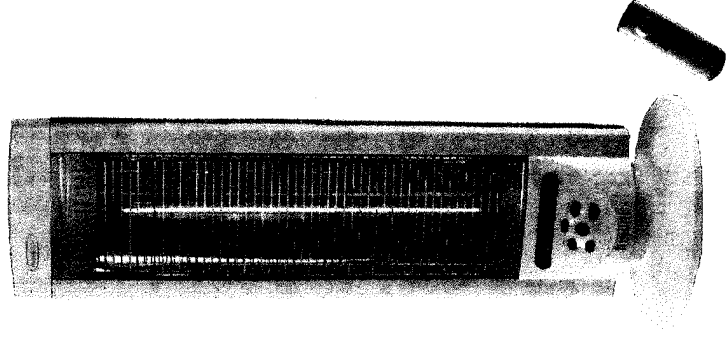

**Please read this instruction manual before
use and keep safe for future reference.**

IMPORTANT SAFETY INSTRUCTIONS


WARNING - This appliance is intended for use in a domestic environment only. Any other use is not recommended by the manufacturer and it may cause fire, electrical shocks or other injury to person or property.

When using electrical appliances, basic safety precautions should always be followed:

1. Before operating the heater, remove the unit from its packaging and make sure that it is in good condition.
2. When in use heater is hot. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials (i.e. furniture, papers, and clothes) at least 3 feet (0.9m) from the front and a responsible distance from all other sides of the heater at all times.
3. Always switch the heater **OFF** and unplug it from the wall outlet **before** attempting to move it.
4. **DO NOT** direct the heater towards curtains, furniture or other flammable objects and ensure that they are at least 3 feet (0.9m) from the front and 1 foot (0.3m) away from the sides and rear.
5. Extreme care should be taken when any heater is used by, or near children, and whenever the heater is left operating and unattended.
6. Do not let children play with the packing material
7. **DO NOT** operate any heater with a damaged cord or plug, or when any malfunction is found, dropped, or damaged in any manner, to avoid a hazard.
8. **DO NOT** attempt to repair or adjust any electrical or mechanical functions on this unit.
9. Check the household voltage to ensure it matched the appliance's rate and specification.
10. **DO NOT** sit the heater on soft surfaces, like a bed. **DO NOT COVER** where openings may become blocked..
11. Always unplug the heater when not in use. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
12. The heater is not intended for use in wet or damp locations. Never locate the heater where it may fall into a bathtub or other water container. **DO NOT** use in bathrooms or outdoors. When not in use always store in a dry area.
13. Do not leave the appliance unattended for extended periods when switched on.
14. Cord should not be covered by any means. Cord should be where there is no risk of tripping on it.

15. Avoid the use of an extension cable as this may overheat and cause a fire.
16. DO NOT insert or allow objects to enter any ventilation or exhaust opening as this may damage the heater and could cause an electrical shock or fire.
17. Do not use near flammable materials for risk of fire.

PRODUCT DIAGRAM

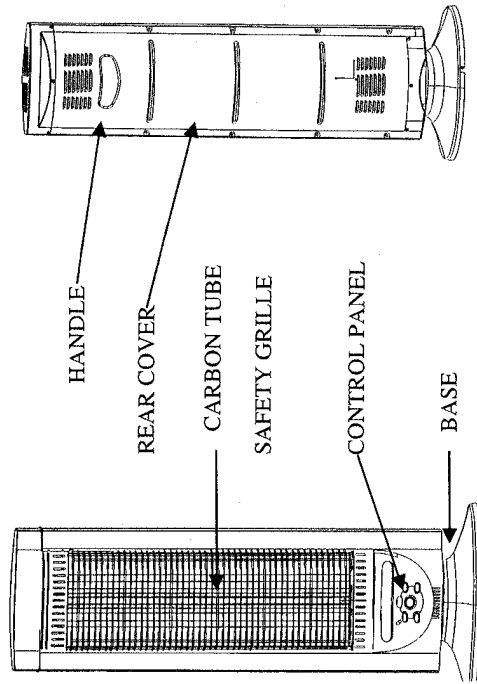


PRODUCT ASSEMBLY

Remove the body of the heater, the two base pieces, the remote and the batteries from the box. Keep the box and packaging materials for future storage.


Caution

- There two parts of base a and base b, please assemble it according the steps as below.
- Please do not inset plug before assembly finished.



1. Snap base a and b together finely

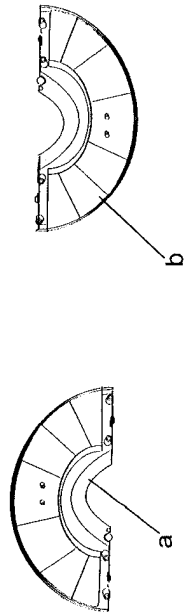

2. Pressure the assembly firmly after snap base a and b together.

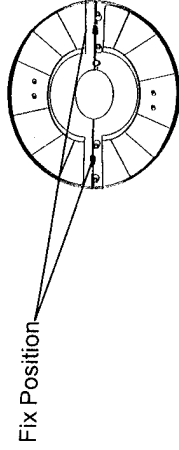

3. Please lock the screw cot the center to fox the base.

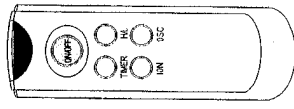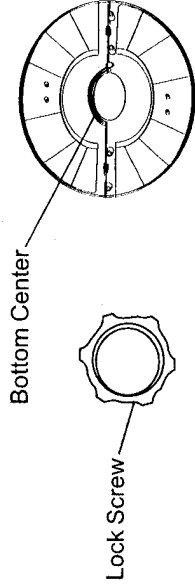

Remote control

OPERATING INSTRUCTIONS

NB. The heater can be operated by either the remote controller, or the front panel

1. Ensure the heater is placed on a firm and level surface.
2. The unit can also be operated using the remote control (2AAA batteries included). Referring to Fig 3 above, fit the batteries into the remote handset – observe polarity. The batteries contain materials which are hazardous to the environment and must therefore be removed from the remote control when they reach the end of their life. Always dispose of the batteries responsibly.
3. Plug the heater into a suitable power outlet. The unit will beep.
4. Using either the front panel or the remote control by pressing the on/off button once to turn the heater on. The power indicator light will be on. To switch off the heater, press the on/off button again. **NB** The heater will come initially on the HIGH heat setting.
5. The heater has two heat settings High: 1000W & Low:500W. Press the H/L button to select desired setting.
6. To operate the oscillation function, press the OSC button. The heater will oscillate left and right. Do not stop the oscillation using force as this will damage the unit.
7. To operate the lonizer function, press the 'lon' button once to switch on, and once again to switch off.

8. The heater has a timer with options of 0.5H: 30 minutes, 1H: 1 hour, 2H 2 hours and 4H: 4 hours. Press the TIMER button to select desired time. The heater will switch off when selected time has expired.
9. The heater will automatically switch itself off after four hours if no further setting adjustment is made.
10. Always unplug the heater when not in use.

Note. This heater is protected by a safety tip-over switch operated by the plunger protruding from the bottom. In the event that the heater is knocked over, this switch will operate and shut down the power to the heater immediately. After being shut off in this manner, the heater will not be on again automatically when returned to upright – it must be switched on again to return it to “in use” condition.

MAINTENANCE

1. Unplug the unit and let it cool completely.
2. To keep the heater clean, the outer body may be cleaned with a soft, damp cloth. After cleaning, dry the unit with a soft cloth. **CAUTION:** Do not let liquid enter the heater.
3. Do not use alcohol, petrol, abrasive chemicals, furniture polish, or rough brushes to clean the heater. This may cause damage to the surface of the heater.
4. Do not immerse the heater in water.
5. Wait until the unit is completely dry before use.

SPECIFICATION

Power: 1000W
Voltage: 120V ~ 60Hz
Net weight: 7.0 Lb
Gross weight: 9.9 Lb



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

